


FRONT DOOR INSTALLATION


INSTALLATION INSTRUCTIONS

IN-CHANNEL SLIMLINE WINDOW VISOR


IMPORTANT: THE WINDOW VISOR MUST BE FITTED INTO THE SAME CHANNEL AS THE DOOR WINDOW GLASS. THE DOOR WINDOW MUST BE FULLY DOWN WHEN INSTALLING THE WINDOW VISOR

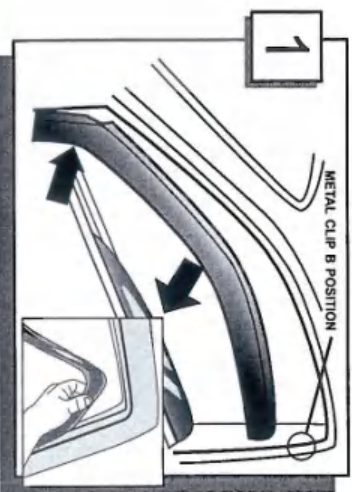


- Trial fit the WINDOW VISOR and take note of location of metal clip B position. Remove WINDOW VISOR.
- Before fitting the WINDOW VISOR pull the rubber trim away from the door frame to install the metal clip B as shown above.

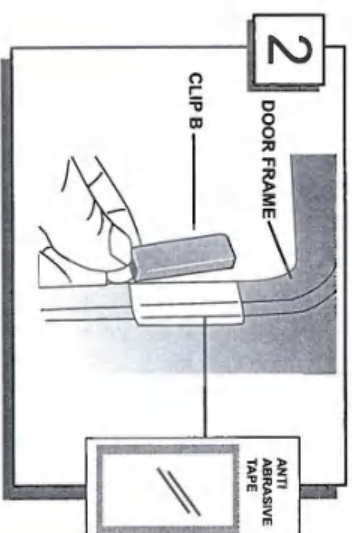

- Clean the inside area of the door frame with alcohol wipe provided and wipe away any residue with a dry clean cloth. Adhere anti abrasive resistant tape to these areas. Insert the metal clip B to door frame and make sure it's resting on the abrasive resistant tape. Not the door frame. Replace rubber trim.

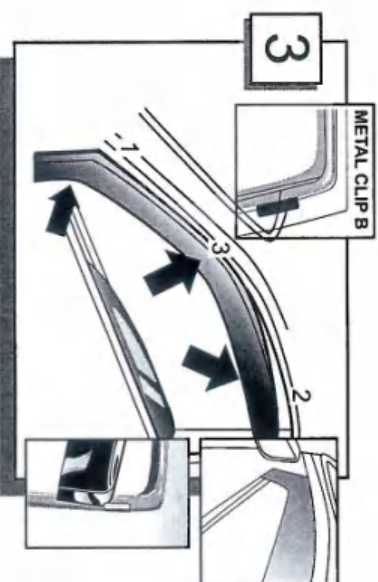

- With the metal clip B in place, install WINDOW VISOR. Fit the front of WINDOW VISOR first at the mirror seal area of the door. Insert the rear of the WINDOW VISOR into the metal clip B and slide the WINDOW VISOR upwards.

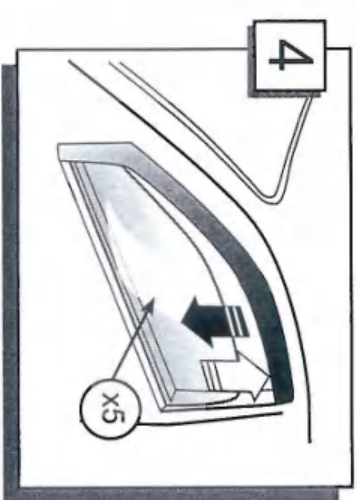

- Wind window up and down several times, to ensure a secure fit.
- To remove gently pull WINDOW VISOR out of clip first, at rear of the door and remove.

To Clean: Use mild detergent and water solution. (Do NOT use solvents).